



INSTALLATION INSTRUCTIONS


Accessory
CHROME WINDSCREEN GARNISH
 P/N 08F86-MCA-100J

Application
GL1800

Publications No.
MII 12892
 Issue Date
June 2009

Honda Dealer: Please give a copy of these instructions to your customer.

PARTS LIST

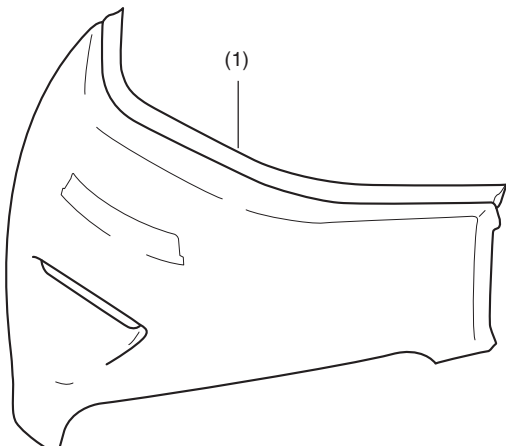

No.	Description	Qty
(1)	Chrome screen garnish	1

TOOLS REQUIRED


Box-end wrench (10 mm)

INSTALLATION


1. Fold down the right and left rear view mirrors forward as shown.

RIGHT REAR VIEW MIRROR

LEFT REAR VIEW MIRROR

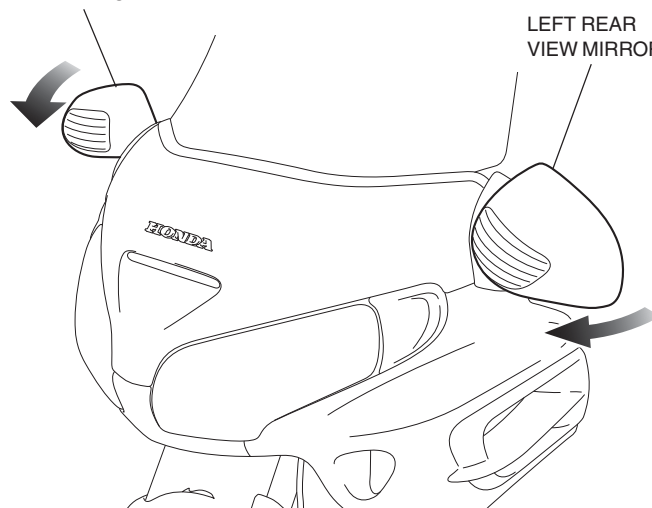

2. Remove the bolts, rubbers and washers from the original screen garnish.

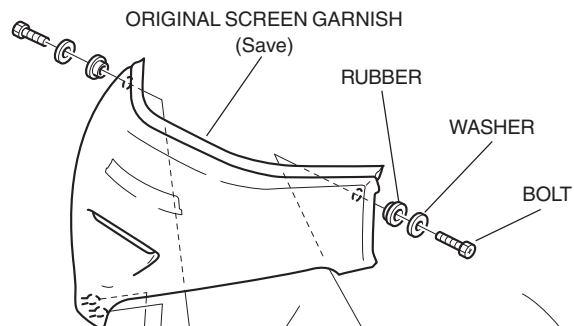

3. Install the chrome screen garnish in the reverse order of removal.